










## PGA FAMILY, PGB FAMILY

INPUT MODULES		
Product	Features	Accessory For
<p><b>PGA-0120</b> Temperature Input Module</p> 	Provides 8 programmable inputs to connect Pt100, Ni100, Ni120, and Cu10 RTDs.	<p><b>PGR-6200</b> <b>PGR-6300</b></p>
<p><b>PGA-0140</b> Differential Current Module</p> 	Adds motor differential protection, compatible with core balance and summation current transformer connections.	<p><b>PGR-6200</b> <b>PGR-6300</b></p>
<p><b>PGA-0CIM</b> Current Input Module</p> 	Interface between current transformers and PGR-6200 and PGR-7200 series relays. Prevents open-CT hazards.	<p><b>PGR-6200</b> <b>PGR-7200</b></p>

REMOTE INDICATION		
Product	Features	Accessory For
<p><b>PGB-0302</b> Remote Indication and Reset Assembly</p> 	Panel-mounted remote indication and reset, standard 22 mm mounting with NEMA 4 and NEMA 13 rating.	<p><b>PGM-8325</b></p>
<p><b>PGB-0325</b> Remote Indication and Reset Assembly</p> 	Panel-mounted remote indication and reset with NEMA 1 rating.	<p><b>PGM-8325</b></p>
<p><b>PGB-6130</b> Remote Indication and Reset Assembly</p> 	Remote indication of overcurrent, phase imbalance, phase loss, phase sequence, and overtemperature. Remote reset included.	<p><b>PGR-6130</b></p>
<p><b>PGB-6800</b> Remote Indication and Reset Assembly</p> 	Remote indication of overcurrent, undercurrent, phase imbalance, phase loss, and phase sequence. Remote reset included.	<p><b>PGR-6800</b></p>
<p><b>PGA-0500</b> Analog % Current Meter</p> 	Panel-mounted analog meter displays ground-fault current as a percentage of the set-point.	<p><b>PGR-2601</b>      <b>PGR-5701</b> <b>PGR-4300</b>      <b>PGR-6100</b> <b>PGR-4704</b></p>
<p><b>PGA-0510</b> Analog Ohm Meter</p> 	Panel-mounted analog ohmmeter displays insulation resistance from 0 Ω to infinity.	<p><b>PGR-3200</b> <b>PGR-6100</b> <b>PGR-8600</b></p>

ACCESSORIES