

Battery Disconnects



Low Current Battery Switches

| Littelfuse Part # | Description |
|-------------------|---|
| 08098700 | 100A Battery Disconnect - Removable Handle |
| 08099080 | 150A Battery Disconnect - Removable Handle w/Boot |

Push-to-Off Switch

| Littelfuse Part # | Description |
|-------------------|---------------------------------------|
| 08098400 | 250A Battery Disconnect - Push Button |

310A M-750 Battery Selector Switch

| Littelfuse Part # | Description |
|-------------------|------------------------------|
| M-750 | 310A Battery Selector Switch |

300A SR Series Switches

| Littelfuse Part # | Description |
|-------------------|--|
| 880062 | 300A Master Battery Disconnect - Panel Mount |
| 880064 | 300A Master Battery Disconnect Surface Mount w/Lockout |

300A 75920 Series Switches

| Littelfuse Part # | Description |
|-------------------|---|
| 75920 | 300A Master Battery Disconnect Panel Mount w/Lockout |
| 75920-01 | Master Disconnect Panel Mount w/Lockout and Yellow Handle |

500A Dual-Pole TR Series Switches

| Littelfuse Part # | Description |
|-------------------|--|
| 880175 | 500A Dual Pole Master Battery Disconnect Panel Mount w/Lockout |
| 880175-0001 | 500A Dual Pole Master Battery Disconnect Panel Mount w/Lockout and Red Handle |
| 880175-0002 | 500A Dual Pole Master Battery Disconnect Panel Mount w/Lockout and Yellow Handle |

Metal Body Switches

| Littelfuse Part # | Description |
|-------------------|-------------------------------------|
| 2484 | 175A Battery Disconnect - Lever |
| 75908 | 300A Battery Disconnect - Lever |
| 75907 | 300A Double Pole Battery Disconnect |